 










NL Bediening • **DK** Betjening

NL Functie	Actie	Resultaat
DK Funktion	Aktivitet	Resultat
NL Oproepsignaal activeren (aanbellen) DK Udløse opkaldssignal (ringe på)		 knippert en hoofdaanbelsignaal klinkt blinker og opkaldstone lyder
NL Deuropener activeren DK Aktivere døråbner	 indrukken trykke	Deuropener schakelt Døråbner skifter
NL Oproepsignaal uitschakelen (oproepuitschakeling) DK Afbryde opkaldssignal (opkaldsafbrydelse)	 kort indrukken tryk kort	 brandt rood lyser rødt
NL Oproepsignaal inschakelen DK Indkoble opkaldssignal	 kort indrukken tryk kort	Hoofdaanbelsignaal klinkt Opkaldstone lyder
NL Hoofdaanbelsignaal selecteren DK Vælge opkaldstone	 ingedrukt houden en hold trykket ned og  meermaals indrukken tryk flere gange	Hoofdaanbelsignaal wisselt Opkaldstone skifter
NL Belvolume wijzigen DK Ændre opkaldstone lydstyrke	 ingedrukt houden hold trykket ned	Volume is aangepast Lydstyrke er tilpasset